



Instruction Manual

*Patent D738406S &
Patents Pending*

Original Language – English

Intec — 4040 Kodiak Court - Frederick, CO 80504 USA

T: 303-833-6644

Web: www.inteccorp.com

Email: info@inteccorp.com

T: 800-666-1611

Rev Date: 20171015

Introduction

Thank you for purchasing Intec's *VORTEC*® *VOLT 110* electric powered vacuum system. Users -- ranging from Rental stores to Professional contractors -- will increase their Return-On-Investment when using this system for insulation recycling, removal, and for HVAC cleaning applications. The innovative design and engineering of Intec's *VORTEC* series of vacuums results in a high powered system that has exceptionally high productivity, while safeguarding your investment with built-in features to ensure a long-lasting return providing exceptional value.

Since 1977, both professional contractors and do-it-yourself equipment users have looked to Intec as the industry leader in the design and manufacture of innovative & portable *FORCE*® insulation blowing machines. Now those same individuals are profiting thru the use of our *VORTEC*® high powered vacuums that are Engineered for High Productivity and Built-to-Last for High Value Generation. We take pride in making your job as easy and profitable as possible thru our machines and accessories.

Best-in-class Customer Service: Total ease of use extends beyond your initial purchase of an Intec system to your evolving needs thru the entire lifecycle. Both before and after the sale service is important to keep you running at peak operating capabilities. Intec's technical team provides installation assistance in addition to maintenance suggestions and trouble-shooting support.

Thank you for partnering with Intec. We appreciate the confidence and trust you have placed in us, and wish you many profit-generating opportunities!




A handwritten signature in black ink, appearing to read 'Ray'.

Ray Lavallee
President, Intec

Table of Contents

SYMBOLS.....	4
SAFETY FIRST	4
HOW THE SYSTEM WORKS.....	5
SET UP AND OPERATION	6
System Set-Up:.....	6
Operation Instructions:	6
MAINTENANCE	7
TROUBLE SHOOTING	7
HOW TO REPROGRAM THE RECEIVER (OPTIONAL WITH GOWIRELESS).....	7
SPECIFICATIONS	8
VACUUM ACCESSORIES	9
MAKING A CLAIM FOR DAMAGE OR LOSS	10
WARRANTY	11


Symbols


SYMBOL	SYMBOL	MEANING
	Danger	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	Warning	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	Caution	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.

Safety First


 Keep hands, shirt, and other foreign objects away from machine during operation.





 DO NOT place hands or body parts in inlet or outlet pipes during operation.

 Never operate equipment without safety guards, front plate, or other original components in place.





 Keep away from vacuum's inlet & outlet when machine is running.


 Never position the outlet in a direction that can harm people or buildings if a foreign material were to exit at high speed.

 When working with insulation, always wear a long sleeve shirt, gloves and a hat. Wear goggles or safety glasses for eye protection. Wear a mask for respiratory protection.



 Keep tools and foreign objects out of the hopper.

 Never leave the machine unattended during operation.

 Do not touch exhaust system during or immediately after use.

 Have available an appropriately sized, working fire extinguisher in the event of need.

How the System Works

OVERVIEW: The *VORTEC VOLT 110* has a 12" impeller which creates a powerful vacuum that pulls large volumes of air and product into the inlet. The air and product is centrifugally dispersed into the vacuum's shroud and discharged thru the outlet. It is powerful, quiet, and exhausts no fumes.

An introduction to key components of the system follows:

Impeller: The impeller is comprised of a base and blades. Together, the impeller assembly spins at very high rates creating a vacuum due to the centrifugal forces created.

Inlet: The inlet tube diameter is 6 inches; 4" optional.

Front Cover: This panel allows access to the impeller assembly.

Shroud: The shroud is made of thick gauge steel and is 2X thickness in main wear area.

Large Fan Wheel: On independent bearing supported shaft with Break-away coupler – prolongs engine life & provides for efficient power transfer from engine to impeller.


Outlet: The 6" diameter outlet section features a safety shield that pivots out of the way to allow for a hose or vacuum bag to easily be mounted onto the outlet.

Variable Frequency Drive: Programmed to drive powerful motor using only one easy to find 120 Volt – 20 amp circuit.


Handle: The handle assists with moving the vacuum. Handle is reversible and removable.

Run Flat Tires: The 10" tires provide for ease in mobility while never needing air since they are filled with foam and will not go flat.

Optional GOWIRELESS Long Range Transmission Wireless Remote: Creates endless opportunities.

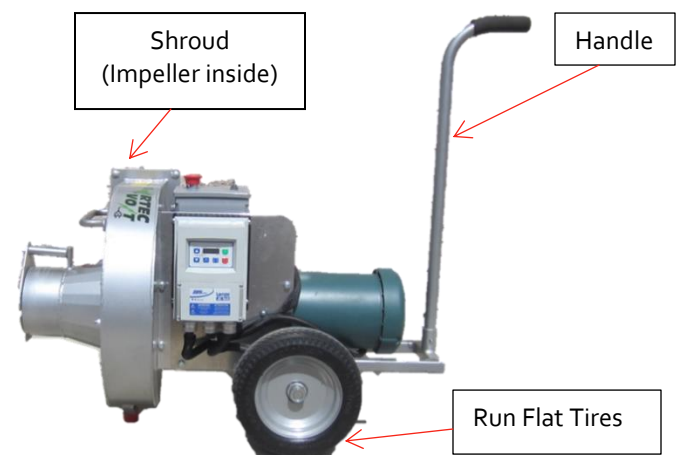

Note: Actual system may have slight differences from pictures.

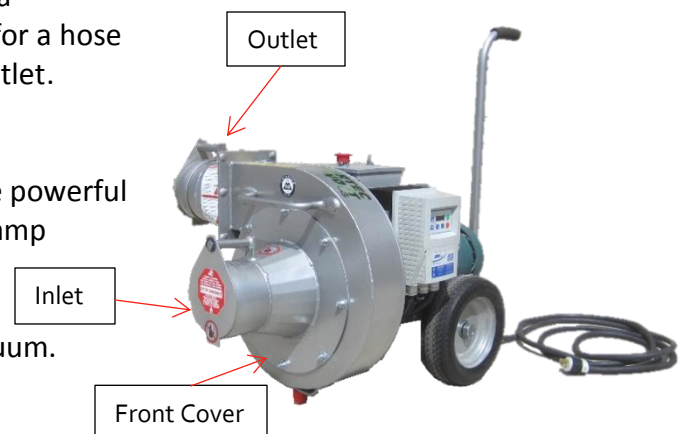

Set up and Operation

Please note that all *VORTEC VOLT 110's* are tested prior to shipment.


System Set-Up:

1. Periodically check all fasteners for tightness. Due to the natural vibration associated with vacuums, some fasteners may become loose over time.
2. Obtain appropriate protective equipment.
3. Set system on a dry, level surface.

4. Attached vacuum hose to the inlet pipe using a hose clamp.

Note: It is highly recommended to use a VORTEC vacSHIELD when using the VORTEC VOLT 110. Install the vacuum hose to the inlet of the vacSHIELD. Then, connect a piece of vacuum hose from the vacSHIELD's outlet to the vacuum's inlet (you can cut a short section from your main vacuum hose, or purchase a short section of hose to meet this need).

5. Attach hose or vacuum bag to the machine's outlet using a hose clamp.

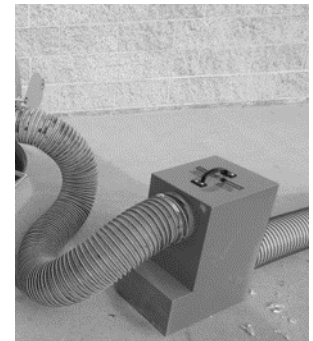

Operation Instructions:

1. Insert the power cord into the power receptacle.
2. Position the toggle switch into the desired position, either keypad mode or wireless mode.
3. If the toggle switch is positioned in keypad mode, press the green RUN button on the keypad to start the vacuum.
4. Allow the vacuum up to 10 seconds to reach full power.
5. To stop the vacuum in keypad mode, press the red STOP button on the keypad.
6. If the toggle switch is positioned in wireless mode, press the VACUUM button on the transmitter to start the vacuum. Note: you will hear it beep for 3 seconds before it will start.
7. Allow the vacuum up to 10 seconds to reach full power.
8. To stop the vacuum in keypad mode, press the VACUUM button on the transmitter.
9. DO NOT RESTART THE VACUUM WITHIN 30 SECONDS OF STOPPING THE MACHINE.
10. NOTE: If the emergency stop has been pushed in, the emergency stop must be pulled out and the stop button must be pressed on the keypad before the machine will start again.

Maintenance

Preventative maintenance will provide for many years of trouble-free use.

Cleaning

Clean the exterior of the machine weekly by wiping with a rag and/or blowing with compressed air; this will help maintain the longevity of the mechanical components in addition to the system's finish. It is important to keep the engine clean so it will cool appropriately.

Clean the engine's inlet air filter prior to each use if dirty. The filter can be washed and is easily replaceable.

We recommend blowing out the motor with compressed air before each use.

Trouble Shooting

<i>Problem</i>	<i>Likely Cause</i>	<i>Remedy</i>
Vacuum on, yet limited production of fibrous insulation	Kink in hose.	Review your hose assembly to ensure no kinks in hose.
	Small diameter hose used on system's inlet.	Utilize the largest diameter hose the system will allow. Utilize largest diameter hose for the longest length possible from the vacuum to the point of material pick-up.
Static Electricity shocking operators.	Movement of insulation material thru hose – more pronounced during times of low humidity – creates static electricity build-up in vacuum hose.	Contact Intec technical service at 800-666-1611. Options include: -Spraying warm water on hose. -Grounding hose to dissipate static electricity.


How to Reprogram the Receiver (*optional with GOWIRELESS*)

- Insert the power cord into the power receptacle.
- The left LEARN BUTTON – LED will flash steadily, while the SYNC-LED will not be lit.
- Press the LEARN button and release.
- The SYNC-LED will flash rapidly while the LEARN BUTTON – LED will remain solid.
- Press the start button on the transmitter.
- Wait 17 seconds for the receiver to reset.
- The LEARN BUTTON – LED will return to its steady flashing state, while the SYNC-LED will not be lit.

Specifications

Weight	142 lbs.
Wheels	10" diameter run-flat
Motor	Powered by one 110V – 20 amp circuit.

Dimensions

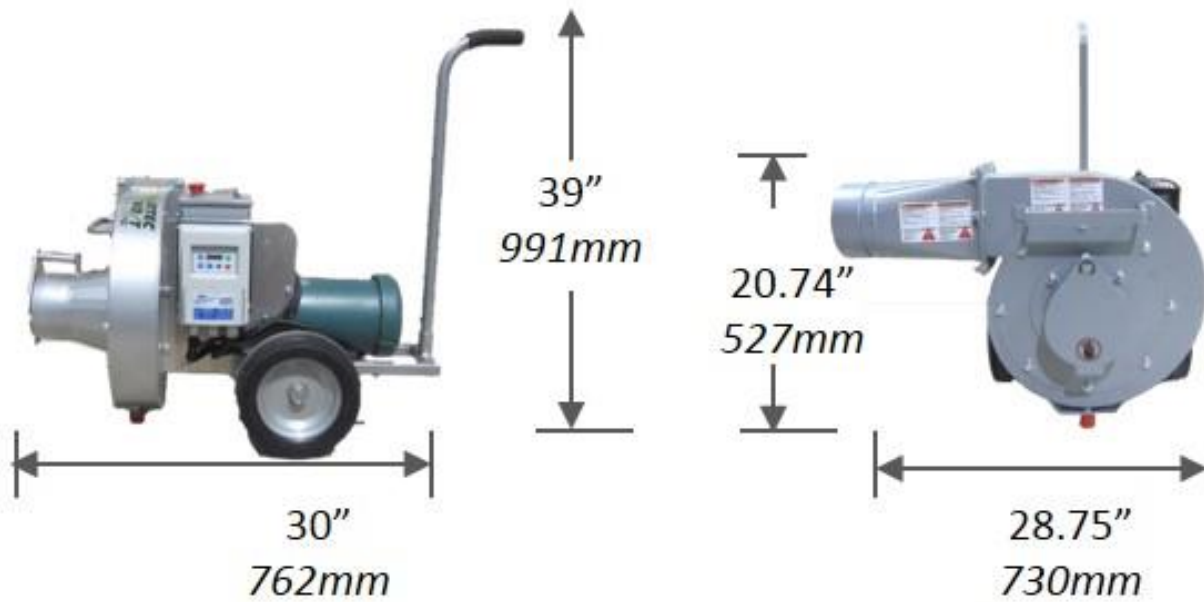

Vacuum Accessories

Description	Part Number	Quantity
VORTEC® vacTUBE 4.4 4" diameter, 4' long pick up tube	74106-00	1
VORTEC® vacTUBE 4.2 4" diameter, 2' long pick up tube	74126-00	1
VORTEC® vacTUBE 6.4 6" diameter, 4' long pick up tube	74108-00	1
VORTEC® vacTUBE 6.2 6" diameter, 2' long pick up tube	74128-00	1
VORTEC® vacSHIELD	74660-00	1
Vacuum Bags	74004-00	1
Numerous Hose Packages featuring long lasting VORTEC® vacTUFF hose to enhance your savings	various	Call Intec 303-833-6644

Making a Claim for Damage or Loss

Your Intec products were carefully packed and thoroughly inspected before leaving our factory. We understand that damage to or defects with your system may unfortunately occur. Please inspect your shipment carefully upon arrival and save the shipping containers and packaging materials in case of damage.

The following table provides you with appropriate actions to take when certain issues are realized.

ISSUE	Action to Take
<p>1 <i>DAMAGE in Transit</i></p> <p>A Visible PRIOR to unpacking (Damage to carton or packing material).</p> <p>B Visible AFTER unpacking (Only apparent when unpacked).</p> <p>C Shortage (# containers does not agree to transportation bill).</p> <p>When items leave our warehouse, the shipper assumes responsibility. It is the responsibility of the consignee to file a claim. Proper documentation is necessary to support the claim. Please inspect all items properly prior to signing for them.</p>	<p>File Claim with appropriate freight carrier.</p> <p>File Claim with appropriate freight carrier.</p> <p>File Claim with appropriate freight carrier.</p>
<p>2 <i>Items received not correct</i></p> <p>A Incorrect items received.</p> <p>B Incomplete order received (not backordered).</p>	<p>Contact Intec Customer Service</p> <p>Contact Intec Customer Service 303.833.6644 ext. 101 info@inteccorp.com</p>
<p>3 <i>Issue within the warranty period</i></p> <p>A Troubleshooting (machine or part not operating as intended).</p> <p>B Replacement part(s).</p> <p>Intec can assist with troubleshooting your issue, and can get you back up and running. If warranty parts are required, a return material authorization (RMA) will be issued by technical service.</p>	<p>Contact Intec Customer Service</p> <p>Contact Intec Customer Service</p> <p>303.833.6644 or info@inteccorp.com</p>
<p>4 <i>Issue outside of warranty period</i></p> <p>A Replacement part, troubleshooting.</p> <p>B Need assistance from a service center.</p>	<p>Contact Intec Customer Service</p> <p>Contact Intec Customer Service 303.833.6644</p>

Shipping Department
 Intec
 4040 Kodiak Court
 Frederick, CO 80504

phone: 303-833-6644, 800-666-1611
 fax: 303-833-6650
 email: info@inteccorp.com
 website: www.inteccorp.com

Warranty

R20170929

It is expressly understood and agreed that no officer, agent, salesman or employee of Intec (MANUFACTURER) has the authority to obligate the MANUFACTURER by any terms, stipulations, or conditions not herein expressed; that all previous representations and agreements, either verbal or written, referring to the machinery and equipment, which is the subject of this Warranty, are hereby superseded and canceled, and that there are no promises or agreements outside of the Warranty agreement. Furthermore, the MANUFACTURER hereby disclaims any implied warranties of merchantability, or implied warranties of fitness for a particular purpose.

With the above understanding, MANUFACTURER provides the following one (1) Year Limited Warranty, and no other, for its VORTEC Volt 110 branded vacuum machine (MACHINE).

a) MANUFACTURER warrants to the original purchaser that the MACHINE is well made, of good material and durable; but only if the MACHINE is operated and maintained in accordance with the MANUFACTURER's Manuals. This Warranty is void if the MACHINE is not so operated and maintained, or if the MACHINE is used for vacuuming materials other than loose fill fiberglass, cellulose, and stonewool (i.e. rockwool) – i.e. loose fill fibrous insulation which are the materials that are intended to be used with the MACHINE.

b) MANUFACTURER guarantees the MACHINE to be free from manufacturing defects at the time of shipment, and to remain free from defects when operated under normal use, for a period of one (1) year from the date of factory shipment.

c) This Warranty shall not apply to any MACHINE or component part which, in the opinion of the MANUFACTURER has been altered, subject to misuse, negligence, accident, shows signs of typical wear, or operated beyond factory rated capacity. Some, yet not all, examples of items not covered by warranty are the following:

- Impeller wear – over time the coarse nature of the insulation will wear the impeller.
- Shroud wear – over time the coarse nature of the insulation will wear the shroud.
- If a user vacuums up foreign materials with examples being: brick, conduit, metal, stone, wood, or other non-loose fill insulation materials (FOREIGN MATERIALS). These FOREIGN MATERIALS may cause damage to the impeller, shroud, and MACHINE. Note: it is highly recommended to use a vacSHIELD to reduce / eliminate the potential for FOREIGN MATERIALS from negatively impacting the MACHINE.
- If vacuum is dropped causing wheel, axle, frame, or Machine damage.

d) All requested Warranty work should be performed at MANUFACTURER's factory or by an Authorized Factory Service Facility. Failure to have the Warranty work done at MANUFACTURER'S factory or by an Authorized Factory Service Facility will void this Warranty. MANUFACTURER will bear full responsibility to repair or replace, at its option, without charge to the original purchaser, any part that, in the MANUFACTURER'S opinion, is found to be defective.

e) All parts claimed defective by original purchaser shall be returned, properly identified, to MANUFACTURER's factory or Authorized Factory Service facility, freight prepaid. All replacement, repaired or non-defective parts will be returned to purchaser, freight collect. MANUFACTURER will supply replacement parts prior to purchaser, freight collect. MANUFACTURER will supply replacement parts prior to receipt of any parts claimed defective, only with the understanding that such replacement parts will be shipped to purchaser at the then prevailing price of said part, C.O.D., freight collect. MANUFACTURER will reimburse cost of any such part only after receipt and inspection, and finding said part defective.

f) MANUFACTURER's liability is expressly limited to the repair or replacement of defective parts set forth in this Warranty. All other damages and warranties, statutory or otherwise, being waived are original purchaser as a condition of sale and purchase of said machines. Furthermore, the MANUFACTURER shall not be liable for damages or delays caused by defective material or workmanship.

This Warranty supersedes all prior versions